Vostro 3910

Setup and Specifications



Notes, cautions, and warnings

(i) NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2021-2022 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Chapter 2: Views of Vostro 3910	8
Front	8
Back	9
Back panel	10
Chapter 3: Specifications of Vostro 3910	12
Dimensions and weight	12
Processor	12
Chipset	13
Operating system	13
Memory	13
Ports and connectors	14
Ethernet	14
Wireless module	15
Storage	15
GPU—Integrated	16
GPU—Discrete	16
Audio	16
Power ratings	16
Operating and storage environment	17
Chapter 4: Getting help and contacting Dell	18

Set up your computer

- (i) NOTE: The images in this document may differ from your computer depending on the configuration you ordered.
- 1. Connect the keyboard and mouse to the USB ports on the computer. If you have a wireless keyboard and mouse, see the documentation that shipped with the wireless keyboard and mouse for instructions.




2. Connect to your network using an Ethernet cable. Alternatively, connect to an available wireless network when setting up the operating system.



3. Connect the display. For more information about setting up the display, see the documentation that is shipped with your display.



- NOTE: The location to connect the display cable can vary if your computer has a discrete graphics card installed. For optimal graphics performance, ensure to connect the display cable to the graphics card if there is one installed.
- **4.** Connect the power cable to the computer and then connect it to the wall outlet.

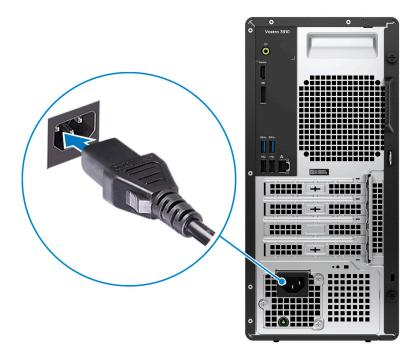

5. Press the power button at the front of the computer to turn it on. If required, press the power button on the display to turn it on.



- NOTE: For instructions on how to connect speakers, a printer and other accessories, see *Me and My Dell* at www.dell.com/manuals.
- 6. Finish Windows setup.

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.
 - NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- If connected to the Internet, sign in with or create a Microsoft account. If not connected to the Internet, create an offline account.


- On the **Support and Protection** screen, enter your contact details.
- 7. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps

Resources	Description
DELL	My Dell Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.
	SupportAssist SupportAssist proactively and predictively identifies hardware and software issues on your computer and automates the engagement process with Dell Technical support. It addresses performance and stabilization issues, prevents security threats, monitors, and detects hardware failures. For more information, see SupportAssist for Home PCs User's Guide at www.dell.com/serviceabilitytools. Click SupportAssist and then, click SupportAssist for Home PCs. [] NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.
l o	Dell Update Updates your computer with critical fixes and latest device drivers as they become available. For more information on using Dell Update, search in the Knowledge Base Resource at www.dell.com/support.
	Dell Digital Delivery Download software applications, which are purchased but not preinstalled on your computer. For more information on using Dell Digital Delivery, search in the Knowledge Base Resource at www.dell.com/support.

Views of Vostro 3910

Front

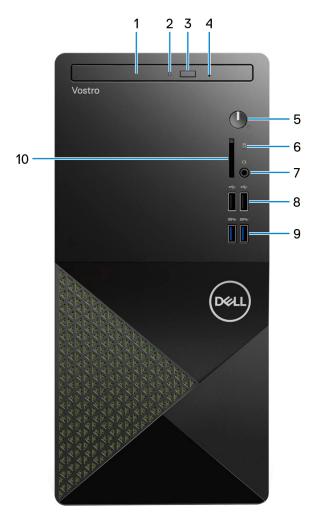

1. Slim optical drive (optional)

The optical drive reads from and writes to CDs and DVDs.

2. Optical-drive activity light

The optical-drive activity light turns on when the computer reads from or writes to an optical drive.

3. Optical-drive eject button

Press to open the optical drive tray.

4. Optical-drive emergency eject pinhole

Used to eject the optical-drive tray manually if the optical-drive eject button fails.

NOTE: For more information about manually ejecting optical-drive trays, see the knowledge base article 000139665 at www.dell.com/support.

5. Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold to force shut-down the computer.

NOTE: You can customize the power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

6. Hard-drive activity light

The activity light turns on when the computer reads from or writes to the hard drive.

7. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

8. USB 2.0 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

9. USB 3.2 Gen 1 ports (2)


Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

10. SD-card slot (optional)

Reads from and writes to the SD card. The computer supports the following card types:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Secure Digital Extended Capacity (SDXC)

Back

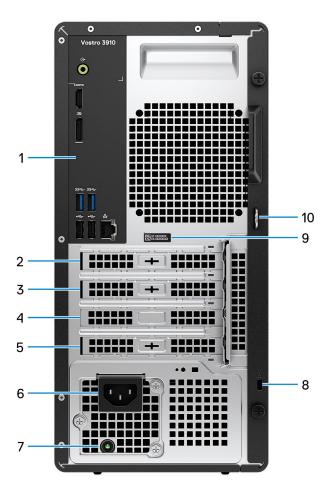

1. Back panel

Connect USB, audio, video, and other devices.

2. PCI-express x1 slot (optional)

Connect a PCI-express card such as an audio or network card to enhance the capabilities of your computer.

3. PCI-express x1 slot

Connect a PCI-express card such as an audio or network card to enhance the capabilities of your computer.

4. PCI-express X16 slot

Connect a PCI-express graphics card to enhance the capabilities of your computer.

5. PCI-32 slot (optional)

Connect a legacy PCI-32 card to enhance the capabilities of your computer.

6. Power port

Connect a power cable to provide power to your computer.

7. Power-supply diagnostics light

Indicates the power-supply state.

8. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

9. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

10. Padlock rings

Attach a standard padlock to prevent unauthorized access to the interior of your computer.

Back panel



1. Line-out port

Connect speakers.

2. HDMI 1.4b port

Connect to a TV, external display or another HDMI-in enabled device. Provides video and audio output.

3. Dual-Mode DisplayPort 1.4

Connect an external display or a projector.

- NOTE: Besides a DisplayPort connector, this port can also provide display output to a DVI or HDMI connector with a DisplayPort 1.4 adapter (sold separately).
- i NOTE: This port is only available on computers shipped with a Intel UHD Graphics integrated graphics processor.

4. USB 3.2 Gen 1 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

5. USB 2.0 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

6. Network port (with lights)

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

The two lights next to the connector indicate the connectivity status and network activity.

Specifications of Vostro 3910

Dimensions and weight

The following table lists the height, width, depth, and weight of your Vostro 3910.

Table 2. Dimensions and weight

Description	Values
Height	324.30 mm (12.77 in.)
Width	154 mm (6.06 in.)
Depth	292 mm (11.50 in.)
Weight i NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	6.75 kg (14.88 lb)

Processor

The following table lists the details of the processors that are supported by your Vostro 3910 .

Table 3. Processor

Descriptio n	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Processor type	12 th Generation Intel Core i3-12100	12 th Generation Intel Core i5-12400	12 th Generation Intel Core i5-12400F	12 th Generation Intel Core i5-12500	12 th Generation Intel Core i7-12700	12 th Generation Intel Core i7-12700F	Intel Pentium Gold G7400	Intel Celeron G6900
Processor wattage	65 W	65 W	65 W	65 W	65 W	65 W	65 W	65 W
Processor core count	4	6	6	6	12	12	2	2
Processor thread count	8	12	12	12	20	20	4	2
Processor speed	Up to 4.30 GHz	Up to 4.40 GHz	Up to 4.40 GHz	Up to 4.60 GHz	Up to 4.90 GHz	Up to 4.90 GHz	Up to 3.70 GHz	Up to 3.40 GHz
Processor cache	12 MB	18 MB	18 MB	18 MB	25 MB	25 MB	6 MB	2 MB
Integrated graphics	Intel UHD Graphics	Intel UHD Graphics	None	Intel UHD Graphics	Intel UHD Graphics	None	Intel UHD Graphics	Intel UHD Graphics

Chipset

The following table lists the details of the chipset supported by your Vostro 3910.

Table 4. Chipset

Description	Values
Chipset	B660
Processor	 12th Generation Intel Core i3/i5/i5F/i7/i7F Intel Pentium Gold Intel Celeron
DRAM bus width	64-bit
Flash EPROM	32 MB
PCle bus	Up to Gen3.0

Operating system

Your Vostro 3910 supports the following operating systems:

- Windows 11 Home, 64-bit
- Windows 11 Pro, 64-bit
- Windows 11 National Academic, 64-bit
- Ubuntu 20.04 LTS, 64-bit

Memory

The following table lists the memory specifications of your Vostro 3910.

Table 5. Memory specifications

Description	Values	
Memory slots	Two U-DIMM slots	
Memory type	Dual-channel DDR4	
Memory speed	3200 MHz	
Maximum memory configuration	64 GB	
Minimum memory configuration	4 GB	
Memory size per slot	4 GB, 8 GB, 16 GB and 32 GB	
Memory configurations supported	 4 GB, 1 x 4 GB, DDR4, 3200 MHz 8 GB, 1 x 8 GB, DDR4, 3200 MHz 8 GB, 2 x 4 GB, dual-channel DDR4, 3200 MHz 16 GB, 1 x 16 GB, DDR4, 3200 MHz 16 GB, 2 x 8 GB, dual-channel DDR4, 3200 MHz 32 GB, 1 x 32 GB, DDR4, 3200 MHz 32 GB, 2 x 16 GB, dual-channel DDR4, 3200 MHz 64 GB, 2 x 32 GB, dual-channel DDR4, 3200 MHz 	

Ports and connectors

The following table lists the external and internal ports available on your Vostro 3910.

Table 6. Ports and connectors

Description	Values	
External:		
Network	One RJ-45 Ethernet port	
USB	Four USB 3.2 Gen 1 portsFour USB 2.0 ports	
Audio	One global headset jackOne audio line-out port	
Video	 One DisplayPort 1.4a (HBR2) One HDMI 1.4b NOTE: HDMI port resolution is up to 1920 x 1200. 	
Media-card reader	One SD-card slot (optional)	
Power port	One AC power-supply port	
Security	One padlock ring slotOne security-cable slot (wedge-shaped)	
Internal:		
PCIe expansion card slots	 One PCle x16 slot One PCle x1 slot or Two PCle x1 slots + one PCl-32 slot 	
mSATA	None	
SATA	Three SATA 3.0 slots	
M.2	 One M.2 2230 slot for WiFi and Bluetooth combo card One M.2 2230/2280 slot for solid-state drive 	
	NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article 000144170.	

Ethernet

The following table lists the wired Ethernet Local Area Network (LAN) specifications of your Vostro 3910.

Table 7. Ethernet specifications

Description	Values
Model number	Realtek RTL8111HSD
Transfer rate	10/100/1000 Mbps

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Vostro 3910.

Table 8. Wireless module specifications

Description	Option one	Option two	Option three
Model number	Realtek RTL8821CE	Intel AX201	Intel 9462
Transfer rate	Up to 433 Mbps	Up to 2400 Mbps	Up to 433 Mbps
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz	2.4 GHz/5 GHz
Wireless standards	 WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) 	 WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) Wi-Fi 6 (WiFi 802.11ax) 	 WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac)
Encryption	64-bit/128-bit WEPAES-CCMPTKIP	64-bit/128-bit WEP AES-CCMP TKIP	64-bit/128-bit WEP AES-CCMP TKIP
Bluetooth	Bluetooth 5.0	Bluetooth 5.2	Bluetooth 5.1

Storage

This section lists the storage options on your Vostro 3910.

Your Vostro 3910 supports one of the following storage configurations:

- One 2.5-inch or 3.5-inch hard-drive
- One M.2 2230/2280 solid-state drive
- One 2.5-inch or 3.5-inch hard drive + one M.2 2230/2280 solid-state drive

The primary drive of your Vostro 3910 varies with the storage configuration. For computers:

- With a M.2 drive, the M.2 drive is the primary drive
- Without a M.2 drive, the 2.5-inch or 3.5-inch hard drive is the primary drive

Table 9. Storage specifications

Storage type	Interface type	Capacity
2.5-inch hard-disk drive	SATA AHCI, up to 6 Gbps	Up to 2 TB
3.5-inch hard-disk drive	SATA AHCI, up to 6 Gbps	Up to 2 TB
M.2 2230 solid-state drive	PCle Gen3 x2 NVMe, up to 16 Gbps	Up to 1 TB
M.2 2280 solid-state drive	PCle Gen3 x2 NVMe, up to 16 Gbps	Up to 1 TB

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Vostro 3910.

Table 10. GPU—Integrated

Controller	External display support	Memory size	Processor
Intel UHD Graphics	One DisplayPort 1.4a (HBR2)One HDMI 1.4b	Shared system memory	 12th Generation Intel Core i3/i5/i7 Intel Pentium Gold Intel Celeron

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Vostro 3910.

Table 11. GPU—Discrete

Controller	Memory size	Memory type
NVIDIA GeForce GT 730	2 GB	GDDR5
NVIDIA GeForce GTX 1650 SUPER	4 GB	GDDR6
NVIDIA GeForce GTX 1660 SUPER	6 GB	GDDR6

Audio

The following table lists the audio specifications of your Vostro 3910.

Table 12. Audio specifications

Description	Values	
Audio type	Integrated 5.1 Channel High Definition audio	
Audio controller	Cirrus Logic CS8409 + CS42L42	
Internal audio interface	High definition audio interface	
External audio interface	One global headset jack One audio line-out port	

Power ratings

The following table lists the power rating specifications of Vostro 3910.

Table 13. Power ratings

Description	Option one	Option two	Option three
Туре	180 W internal Power Supply Unit (PSU), 85% Efficient, 80 PLUS Bronze	240 W internal PSU, 85% Efficient, 80 PLUS Bronze	300 W internal PSU, 85% Efficient, 80 PLUS Bronze
Input voltage	90 VAC-264 VAC	90 VAC-264 VAC	90 VAC-264 VAC

Table 13. Power ratings (continued)

Description		Option one	Option two	Option three
Input frequency		47 Hz-63 Hz	47 Hz-63 Hz	47 Hz-63 Hz
Input current (maxir	num)	3 A	4 A	4.60 A
Output current (con	tinuous)	Operating: 12 VA - 15 A 12 VB - 14 A Standby: 12 VA - 1.50 A 12 VB - 3.30 A	Operating: 12 VA - 18 A 12 VB - 15 A Standby: 12 VA - 1.50 A 12 VB - 3.30 A	Operating: 12 VA - 16.50 A 12 VB - 15 A 12 VC - 12 A Standby: 12 VA - 1.50 A 12 VB - 3.30 A 12 VC - 0 A
Rated output voltag	е	• 12 VA • 12 VB	• 12 VA • 12 VB	12 VA12 VB12 VC
Temperature range:				
Operating		5°C to 45°C (41°F to 113°F)	5°C to 45°C (41°F to 113°F)	5°C to 45°C (41°F to 113°F)
Storage		-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Operating and storage environment

This table lists the operating and storage specifications of your Vostro 3910.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 14. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10000 ft)	-15.2 m to 10668 m (-49.87 ft to 35000 ft)

CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

^{*} Measured using a random vibration spectrum that simulates user environment.

[†] Measured using a 2 ms half-sine pulse.

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 15. Self-help resources

Self-help resources	Resource location	
Information about Dell products and services	www.dell.com	
My Dell app	Dell	
Tips	*	
Contact Support	In Windows search, type Contact Support, and press Enter.	
Online help for operating system	www.dell.com/support/windows	
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support. For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer.	
Dell knowledge base articles for a variety of computer concerns	 Go to www.dell.com/support. On the menu bar at the top of the Support page, select Support > Knowledge Base. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles. 	

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

- (i) NOTE: Availability varies by country/region and product, and some services may not be available in your country/region.
- NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.